

Replacement Sheet

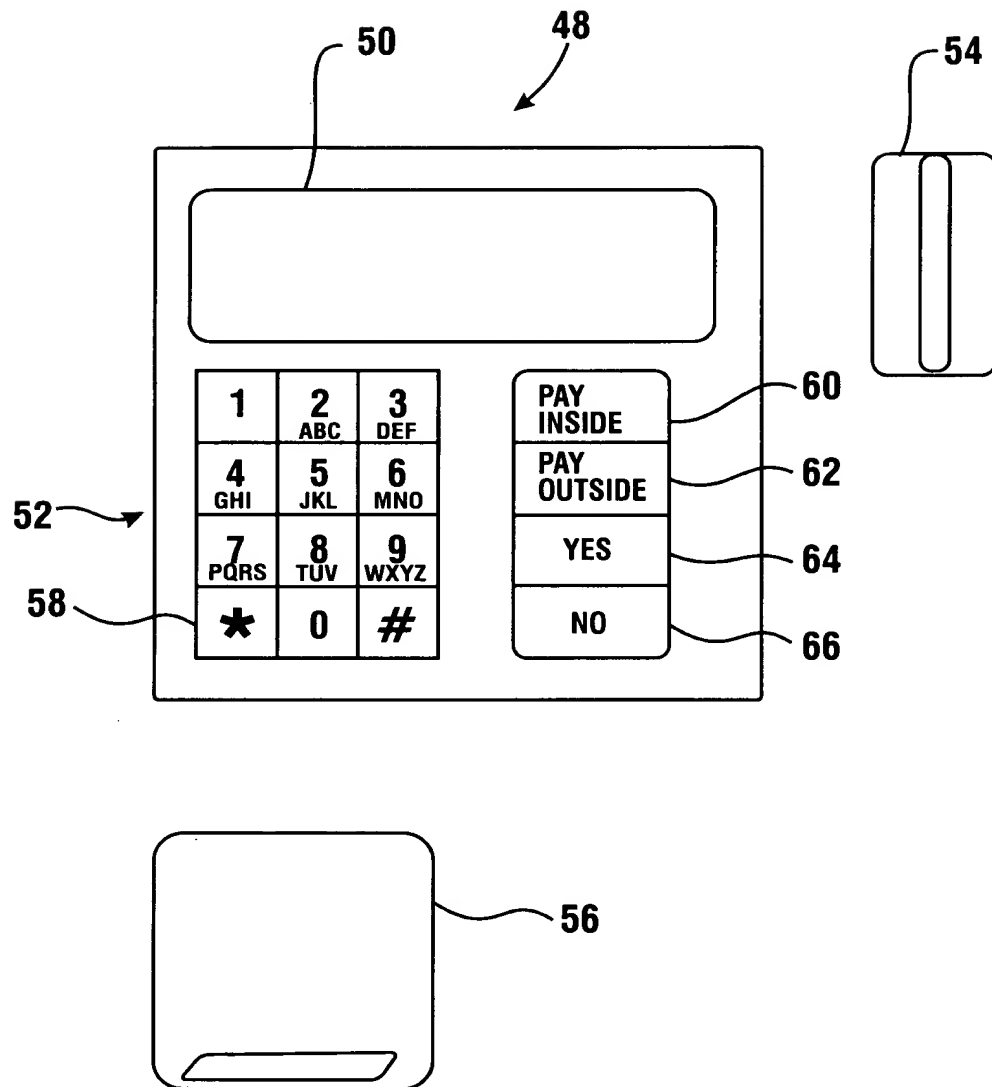 


FIG. 2

Replacement Sheet

FIG. 3

**SELECT
PAY INSIDE
OR PAY OUTSIDE**

68

ACTION
- SELECT "PAY INSIDE"

FIG. 4

**REMOVE NOZZLE
AND PUMP GAS**

70

ACTION
- REMOVE NOZZLE
AND PUMP

FIG. 5

**WOULD YOU
LIKE TO
HAVE SOME CASH?
IF SO PRESS "YES"**

72

ACTION
- NO RESPONSE
- REPLACE NOZZLE

FIG. 6

**PLEASE PAY
INSIDE**

74

ACTION
- USER PAYS INSIDE

FIG. 7

**SELECT
PAY INSIDE
OR PAY OUTSIDE**

76

ACTION

- USER SELECTS "PAY OUTSIDE"

FIG. 8

**PRESS
1 FOR CREDIT CARD
2 FOR DEBIT CARD
3 FOR STORED VALUE
CARD**

78

ACTION

**- USER SELECTS INPUT
FOR EXAMPLE "1" FOR
CREDIT CARD**

FIG. 9

**PLEASE INSERT
CREDIT CARD IN
CARD READER AND
WITHDRAW QUICKLY**

86

ACTION

**- USER INSERTS CARD
AND WITHDRAWS CARD**

FIG. 10

**REMOVE NOZZLE
AND PUMP GAS**

88

ACTION

- REMOVE NOZZLE AND PUMP

FIG. 11

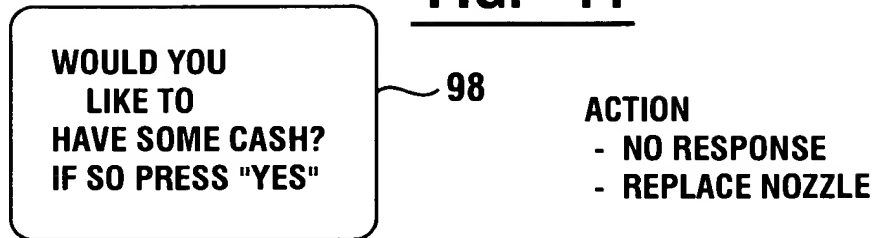 


FIG. 12

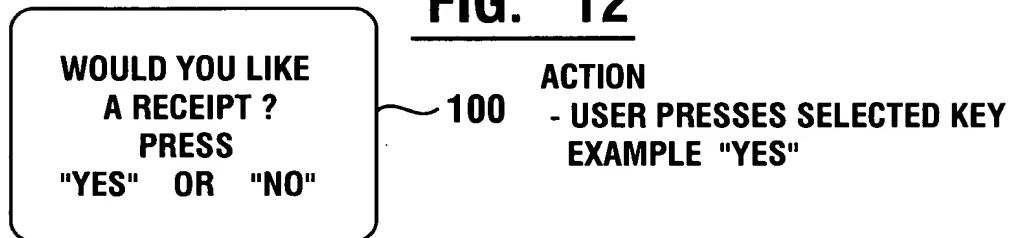 


FIG. 13

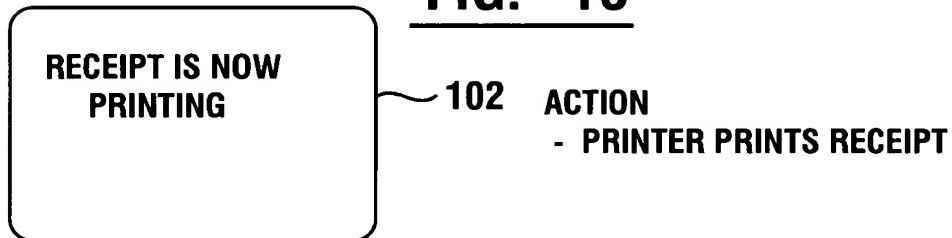 


FIG. 14

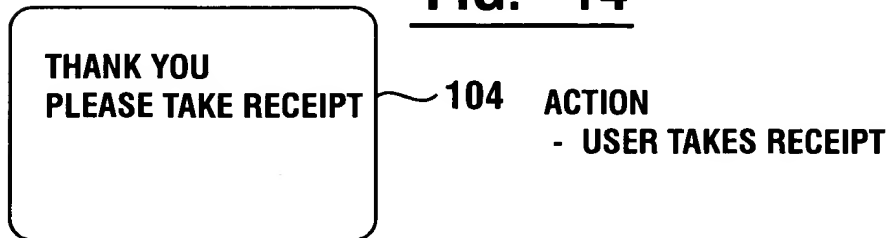 


FIG. 15

PLEASE ENTER YOUR
PIN NUMBER AND
THEN PRESS #
PRESS * TO CLEAR

92

ACTION

- USER INPUTS PIN AND
THEN #

FIG. 16

PLEASE INSERT
STORED VALUE CARD
INTO READER AS
FAR AS IT WILL GO

94

ACTION

- USER INSERTS STORED VALUE
CARD

FIG. 17

SORRY, WE ARE
UNABLE TO PROCESS
YOUR TRANSACTION

96

ACTION

- MACHINE RETURNS TO FIRST
SCREEN AFTER TIME OUT

Replacement Sheet

FIG. 18

PLEASE INPUT AMOUNT
BY PRESSING KEYS
THEN PRESS #
MAXIMUM \$100

106

ACTION

- USER INPUTS AMOUNT
AND #

EXAMPLE \$100 INPUT

FIG. 19

\$100 FROM
CREDIT CARD
PRESS "YES" TO CONFIRM
"NO" TO INPUT NEW AMOUNT

108

ACTION

- CUSTOMER PRESSES
APPROPRIATE BUTTON

EXAMPLE "YES"

FIG. 20

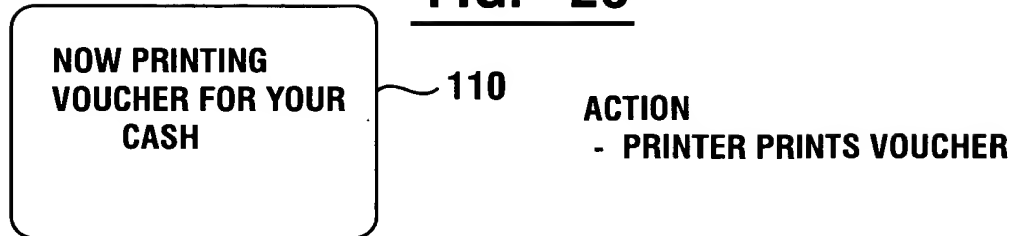 


FIG. 21

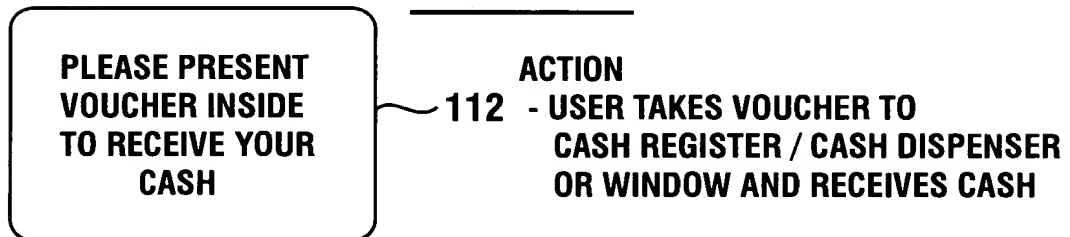 


FIG. 22

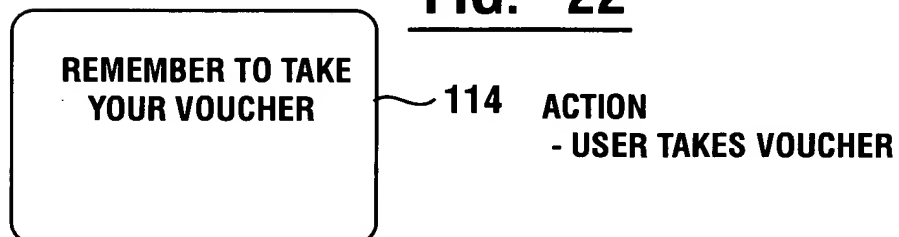 


FIG. 23

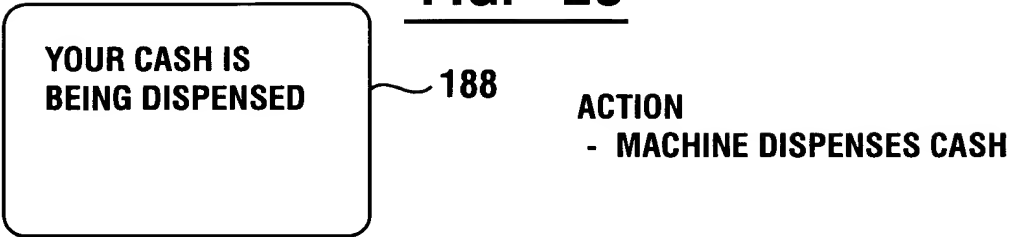
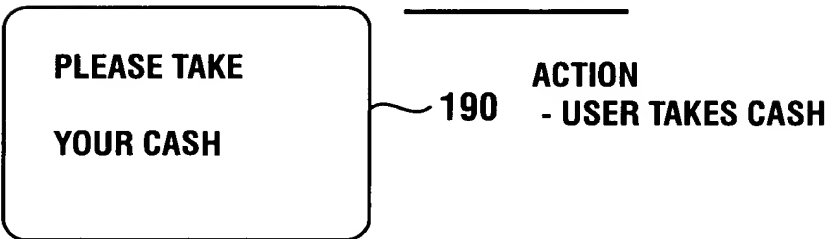 


FIG. 24

 

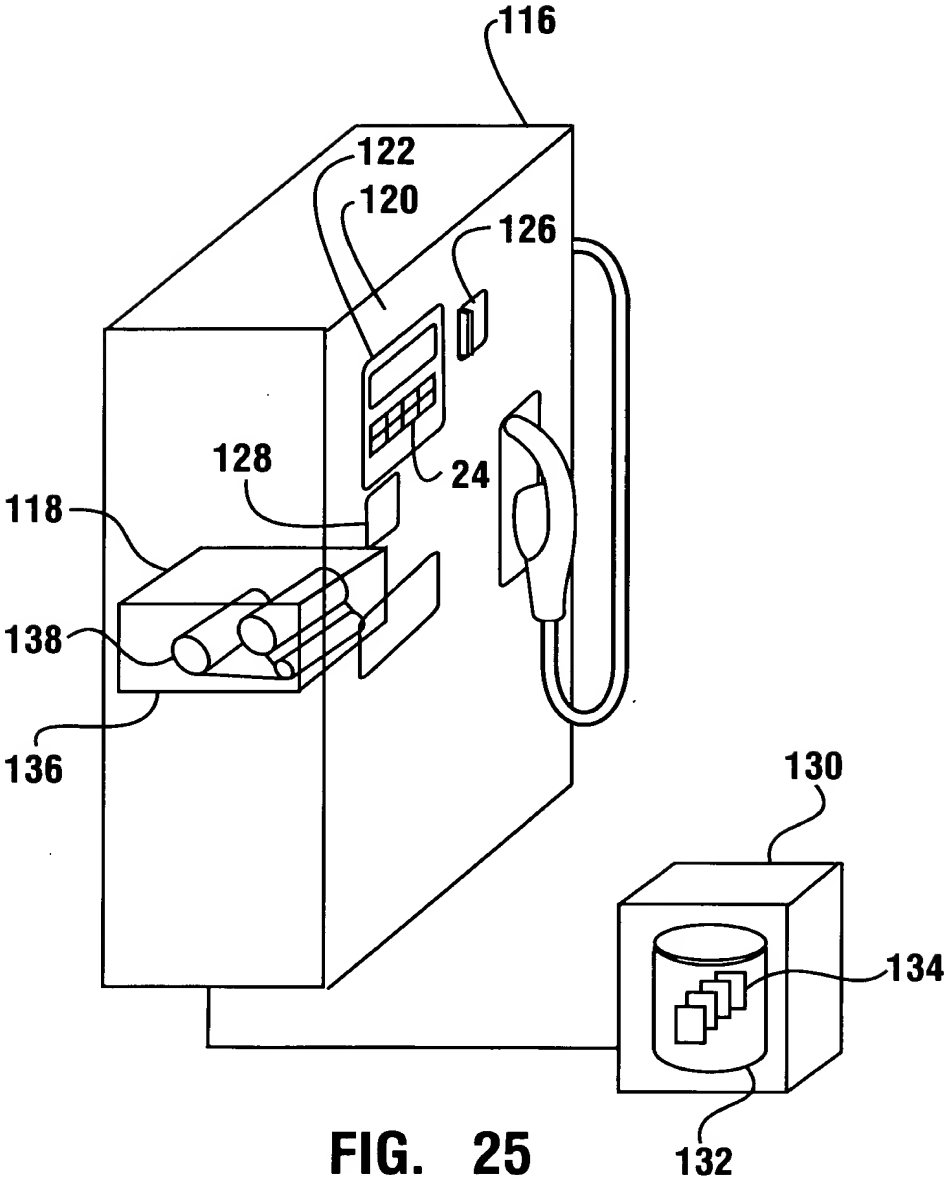 


FIG. 26

PAY BY
1 CARD
2 CASH

192

ACTION

- USER SELECTS CASH OR CARD
EXAMPLE CASH

FIG. 27

**INSERT BILLS INTO
BILL ACCEPTOR BELOW**

**PRESS "1" TO RETURN TO
FIRST SCREEN**

194

ACTION

- USER INSERTS NOTES INTO
NOTE ACCEPTOR OR RETURNS
TO BEGINNING
EXAMPLE NOTE INPUT

FIG. 28

AVAILABLE CREDIT
\$20.00
**PRESS "1" TO RETURN TO
FIRST SCREEN**
PRESS "2" TO BEGIN PUMPING

196

ACTION

- USER INSERTS MORE NOTES
OR PRESSES OTHER OPTIONS
EXAMPLE USER PRESSES "2"

FIG. 29

**REMOVE NOZZLE
AND PUMP GAS**

198

ACTION

- USER REMOVES NOZZLE
AND PUMPS
- PUMP STOPS WHEN AVAILABLE
CREDIT IS REACHED OR
CUSTOMER SHUTS OFF

Replacement Sheet

FIG. 30

**YOUR AVAILABLE
CREDIT IS GREATER
THAN YOUR CHARGE
A CASH VOUCHER FOR
THE DIFFERENCE IS
PRINTING**

200

**ACTION
- MACHINE PRINTS VOUCHER
FOR DIFFERENCE**

FIG. 31

**PLEASE PRESENT
VOUCHER INSIDE
TO RECEIVE YOUR
CASH**

202

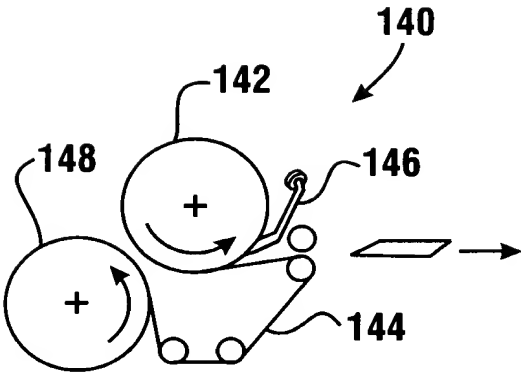 


FIG. 32

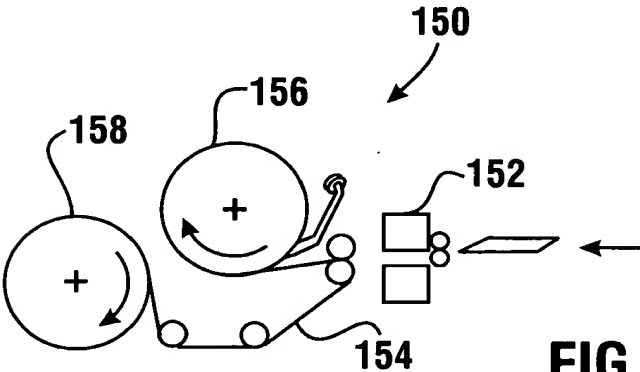 


FIG. 33

Replacement Sheet

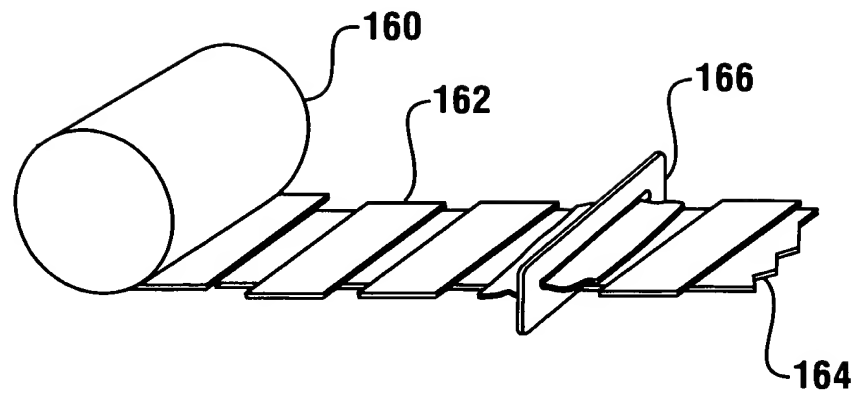 


FIG. 34

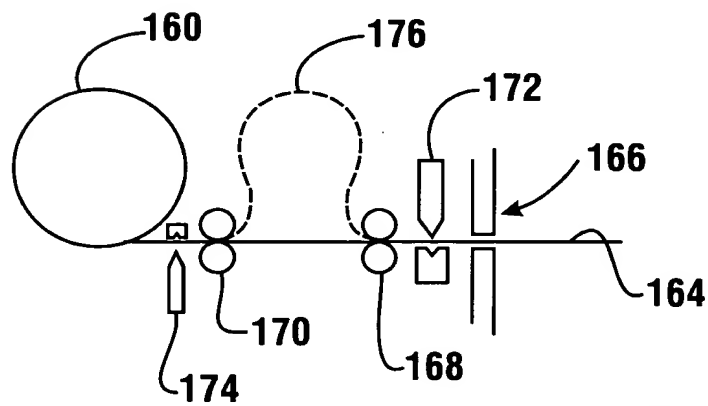 


FIG. 35

Replacement Sheet

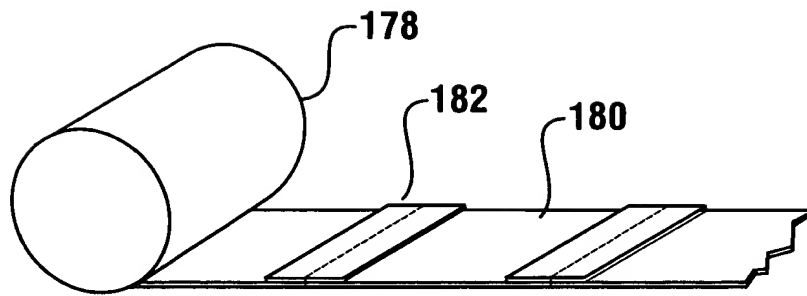 


FIG. 36

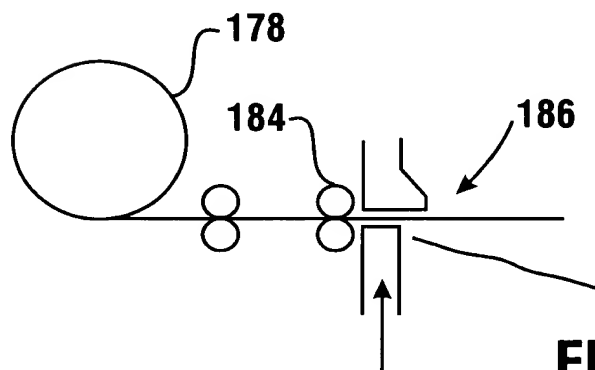 


FIG. 37

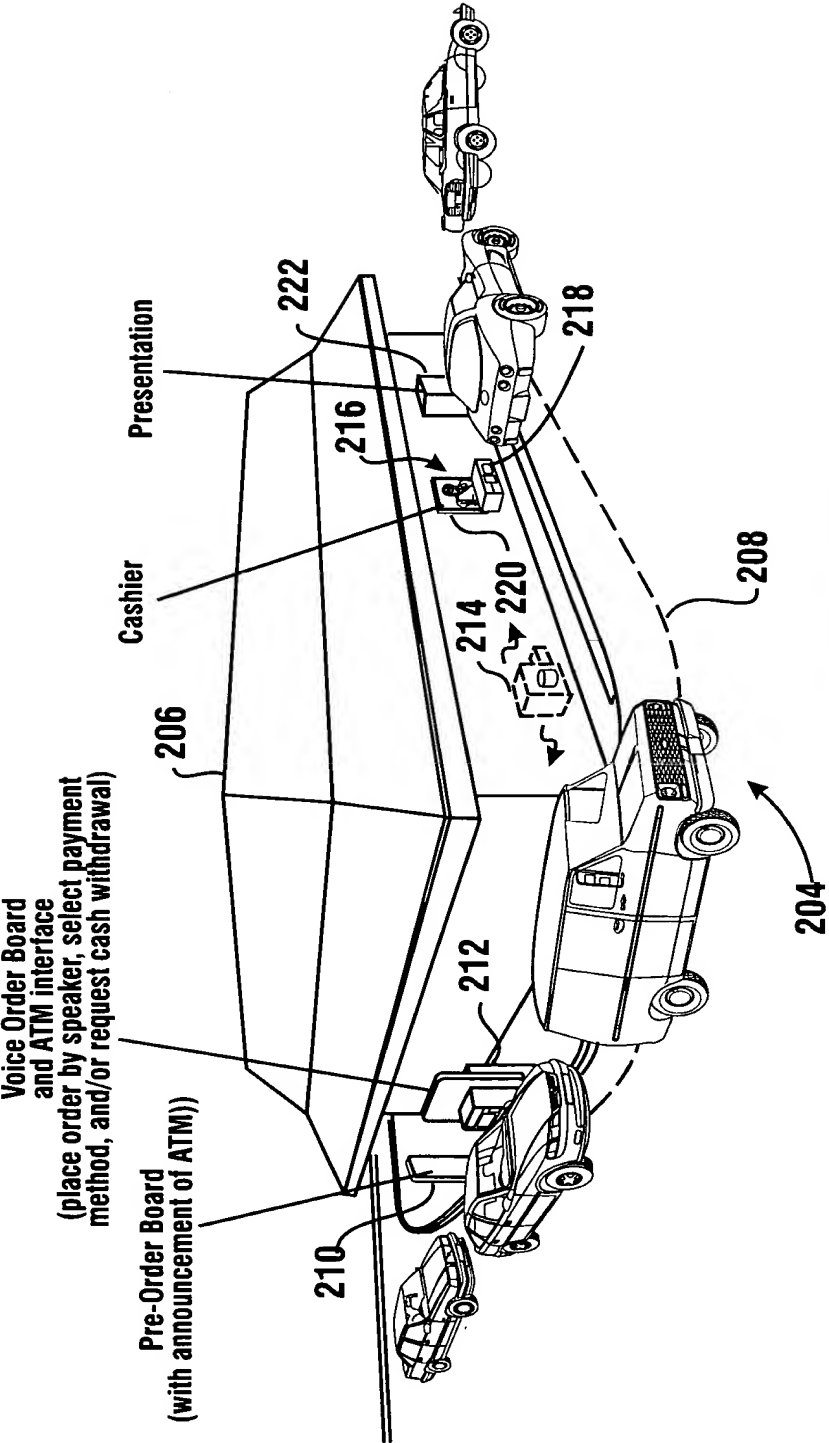
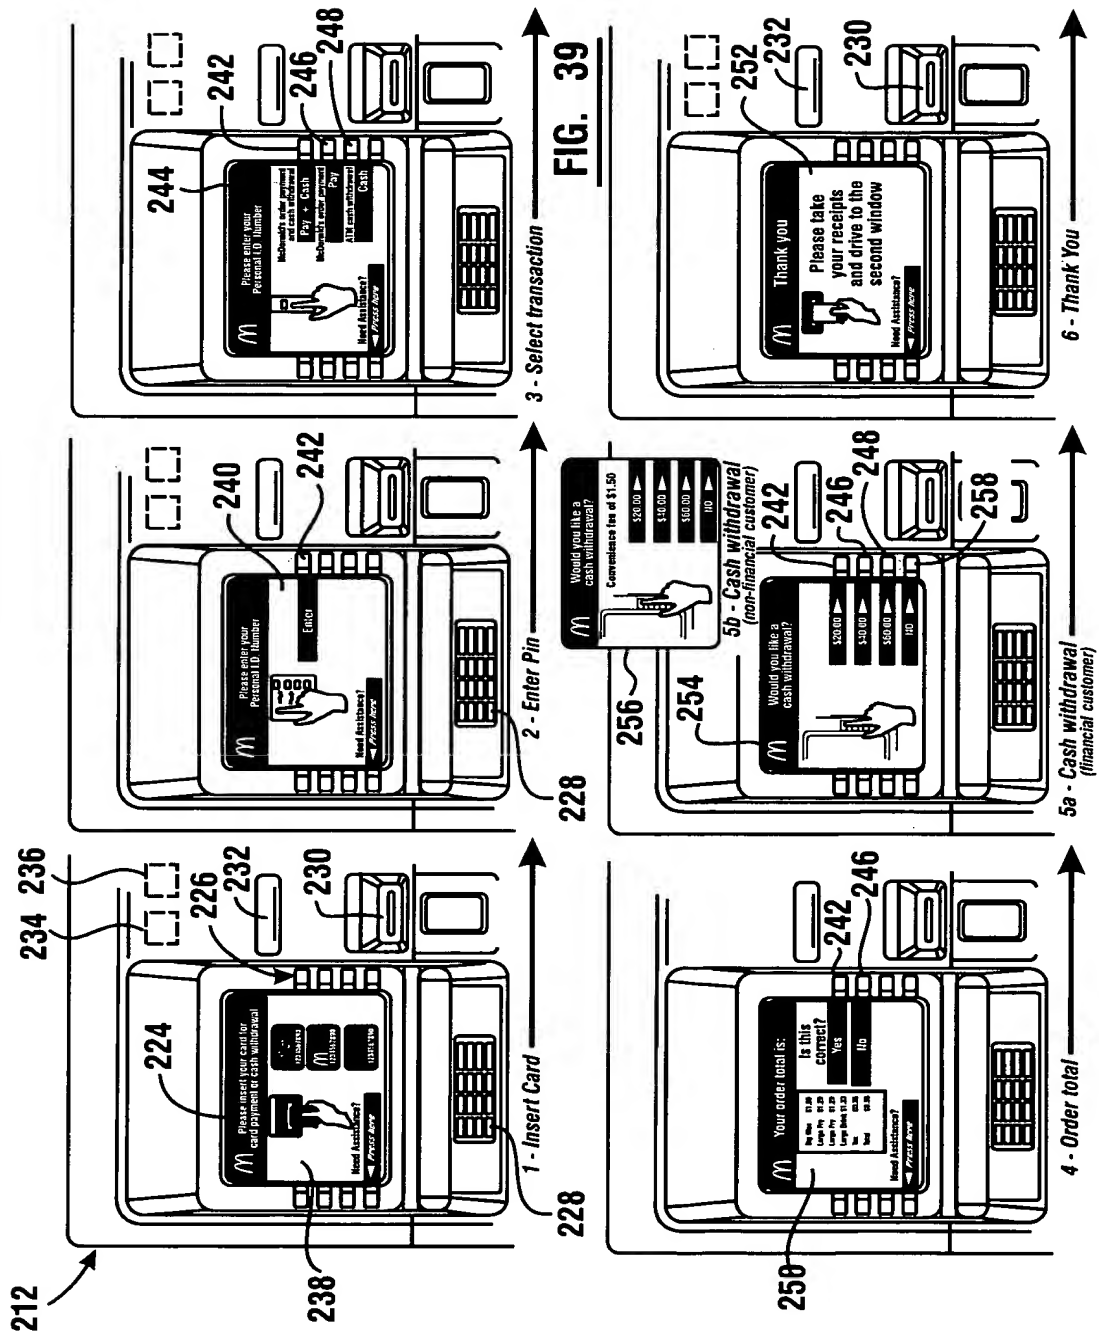 


FIG. 38

 



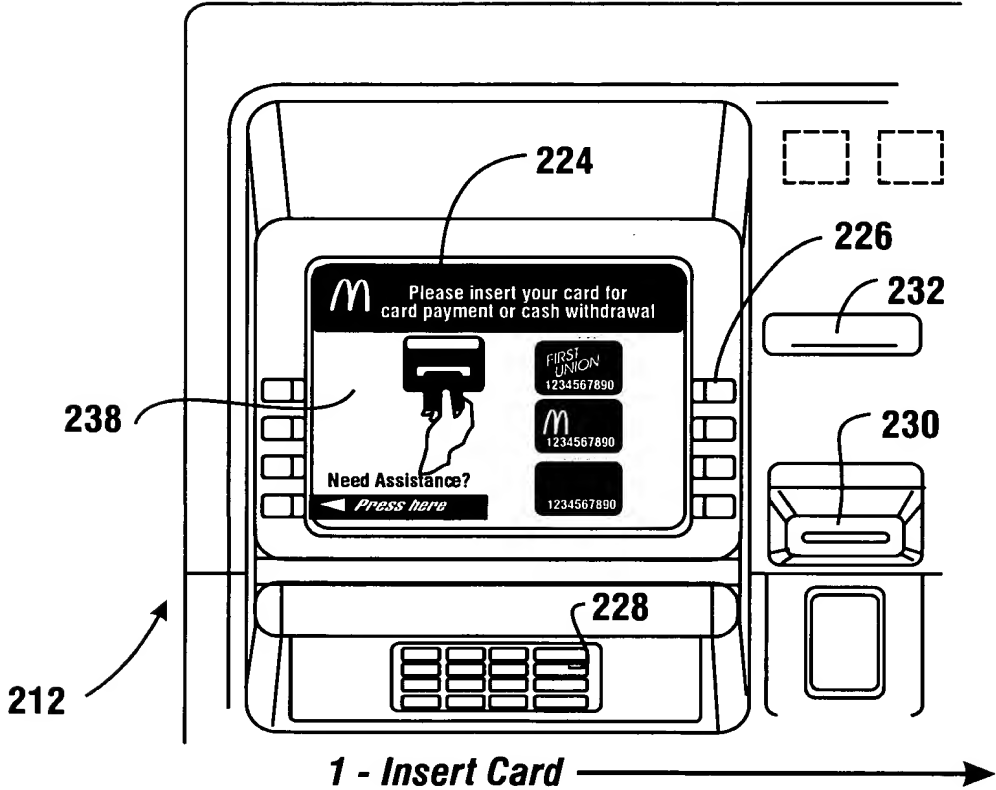 



FIG. 40

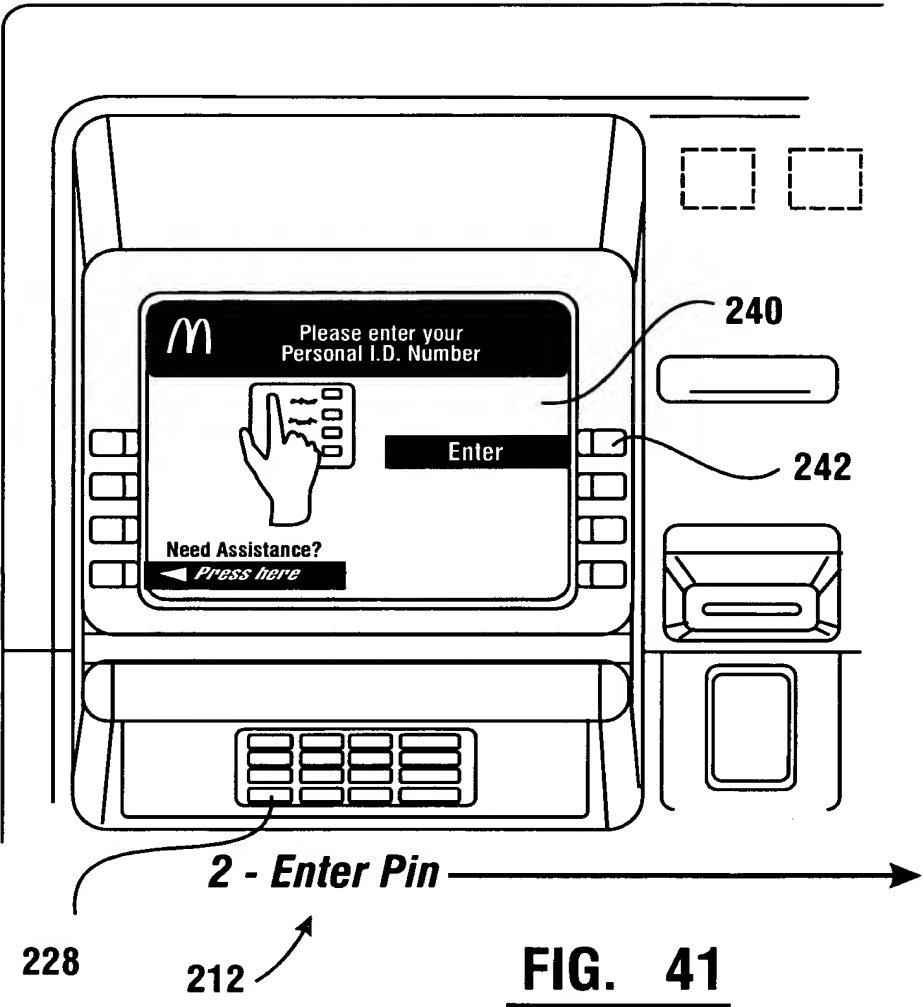 

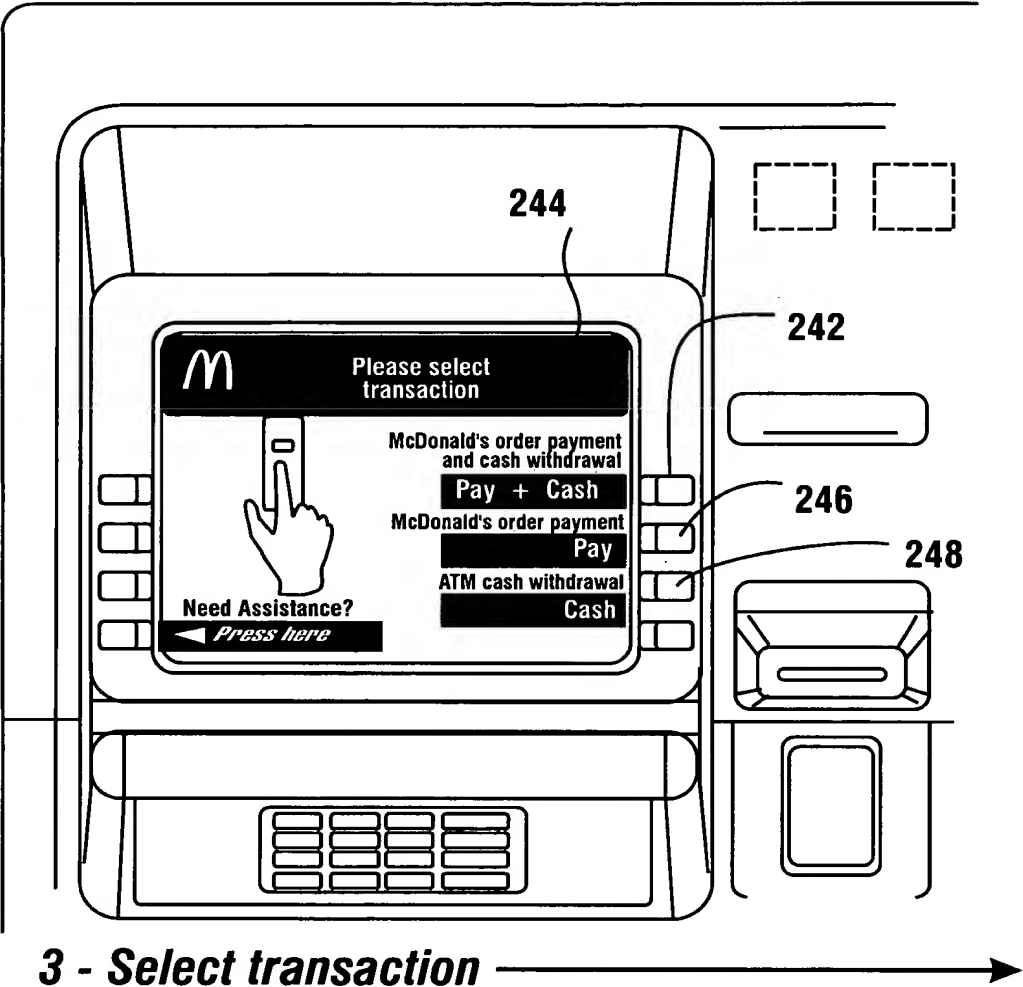 

212

FIG. 42

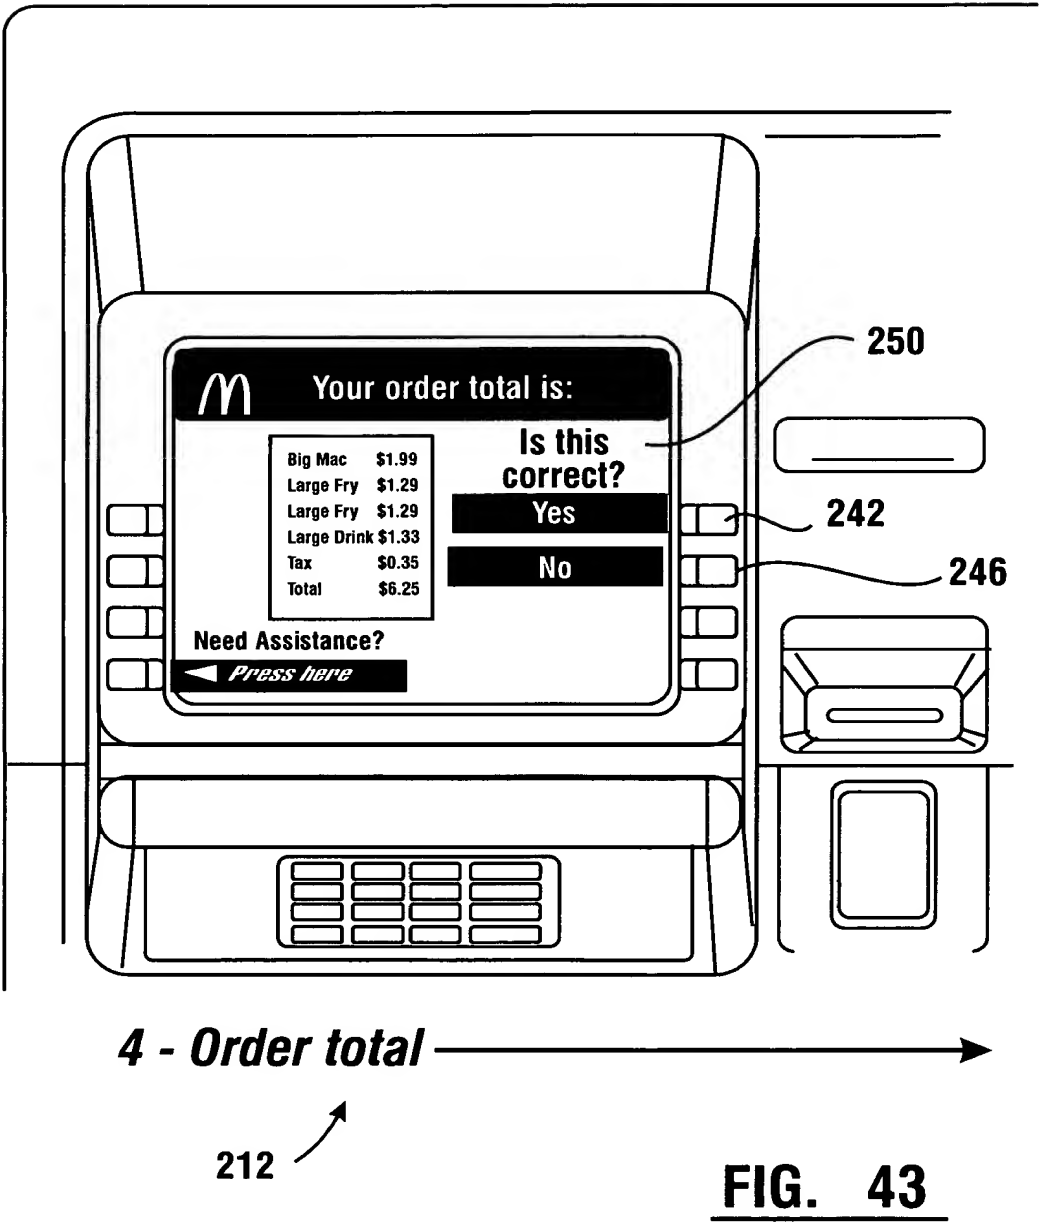 

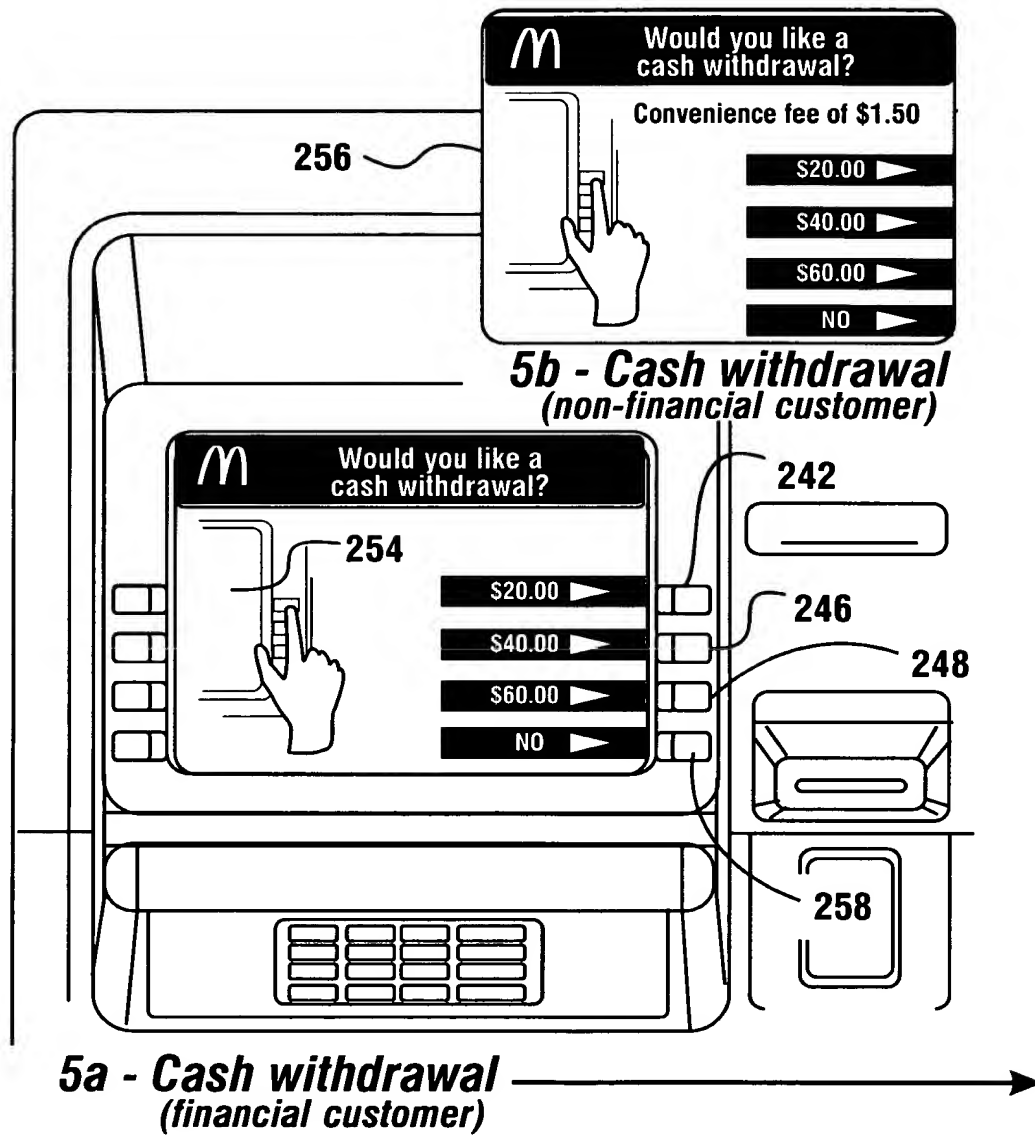 
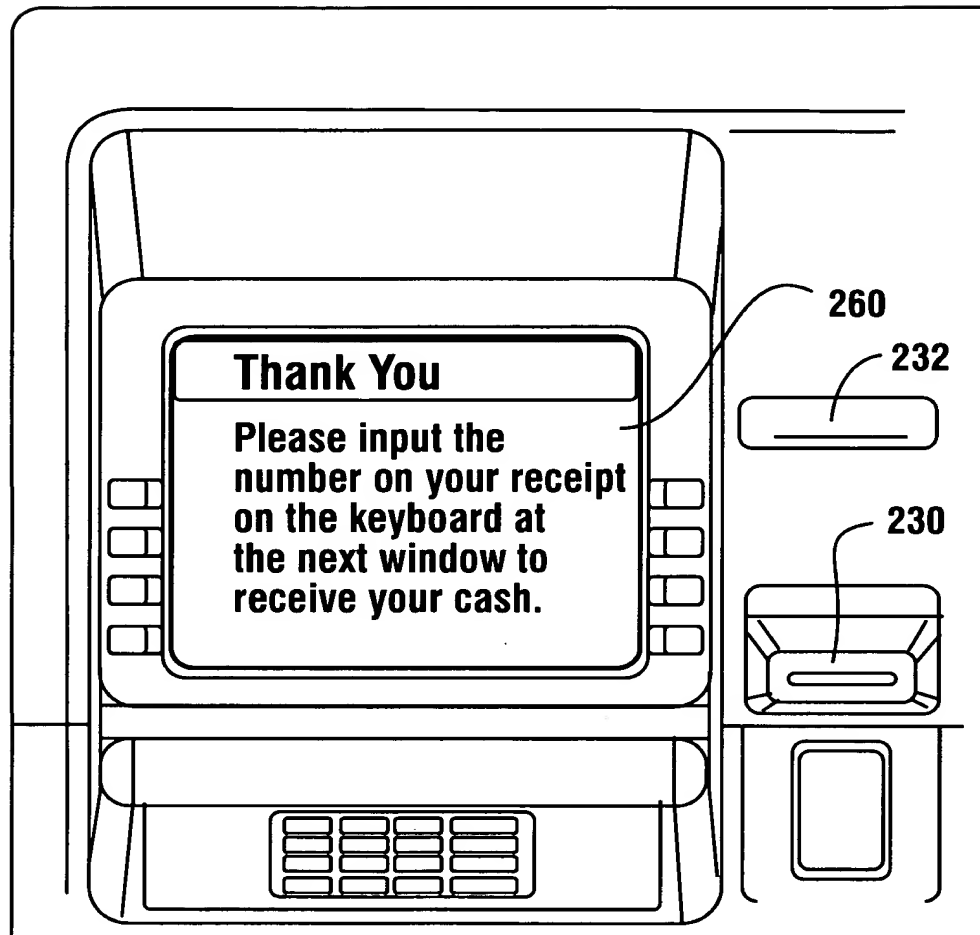 


FIG. 44

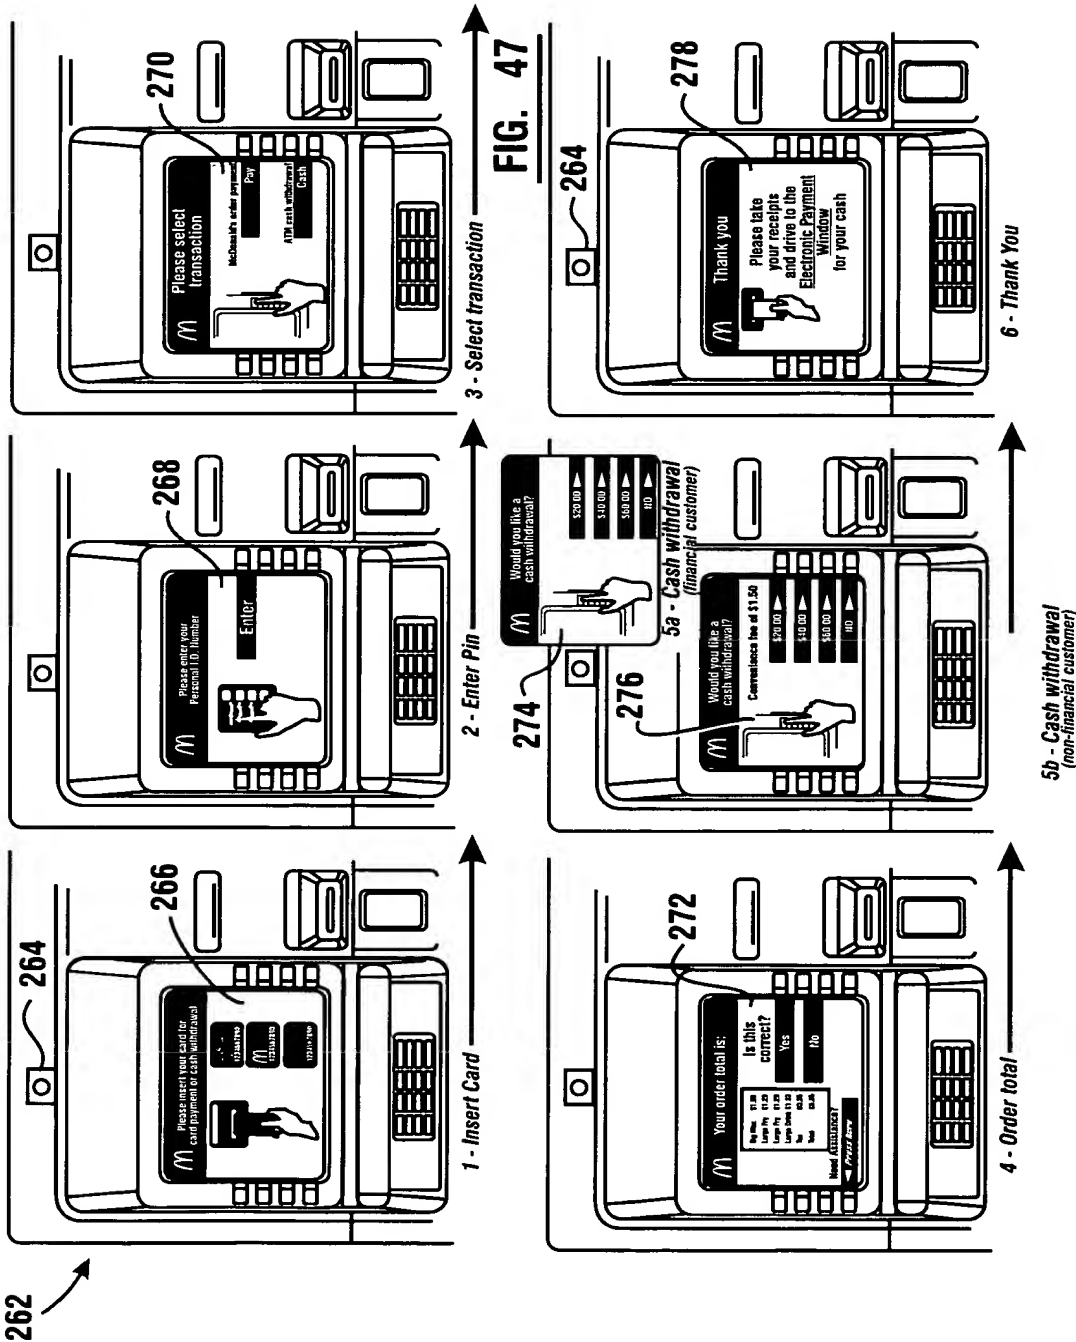 


FIG. 45



6 - Thank You

FIG. 46



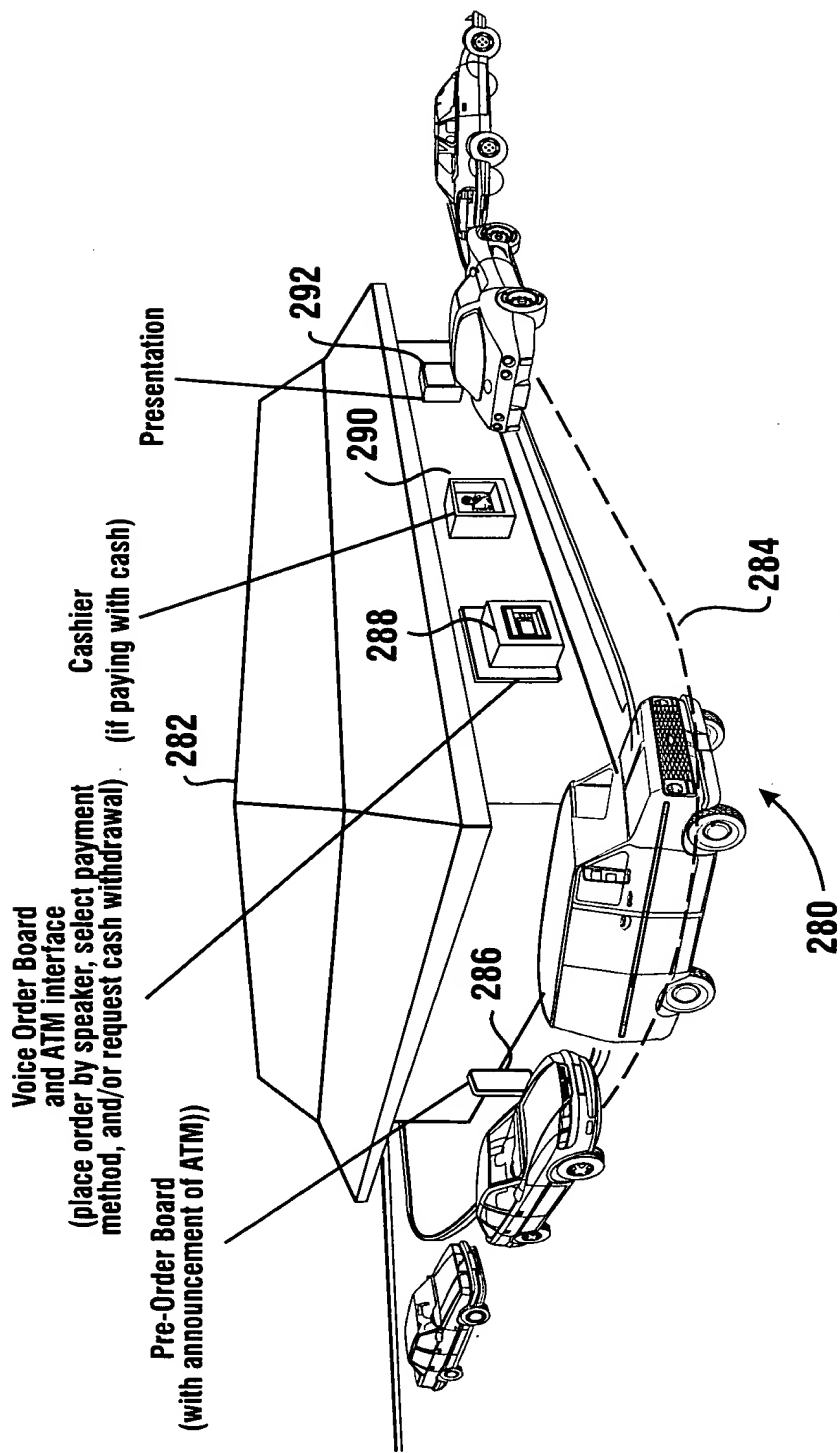 


FIG. 48

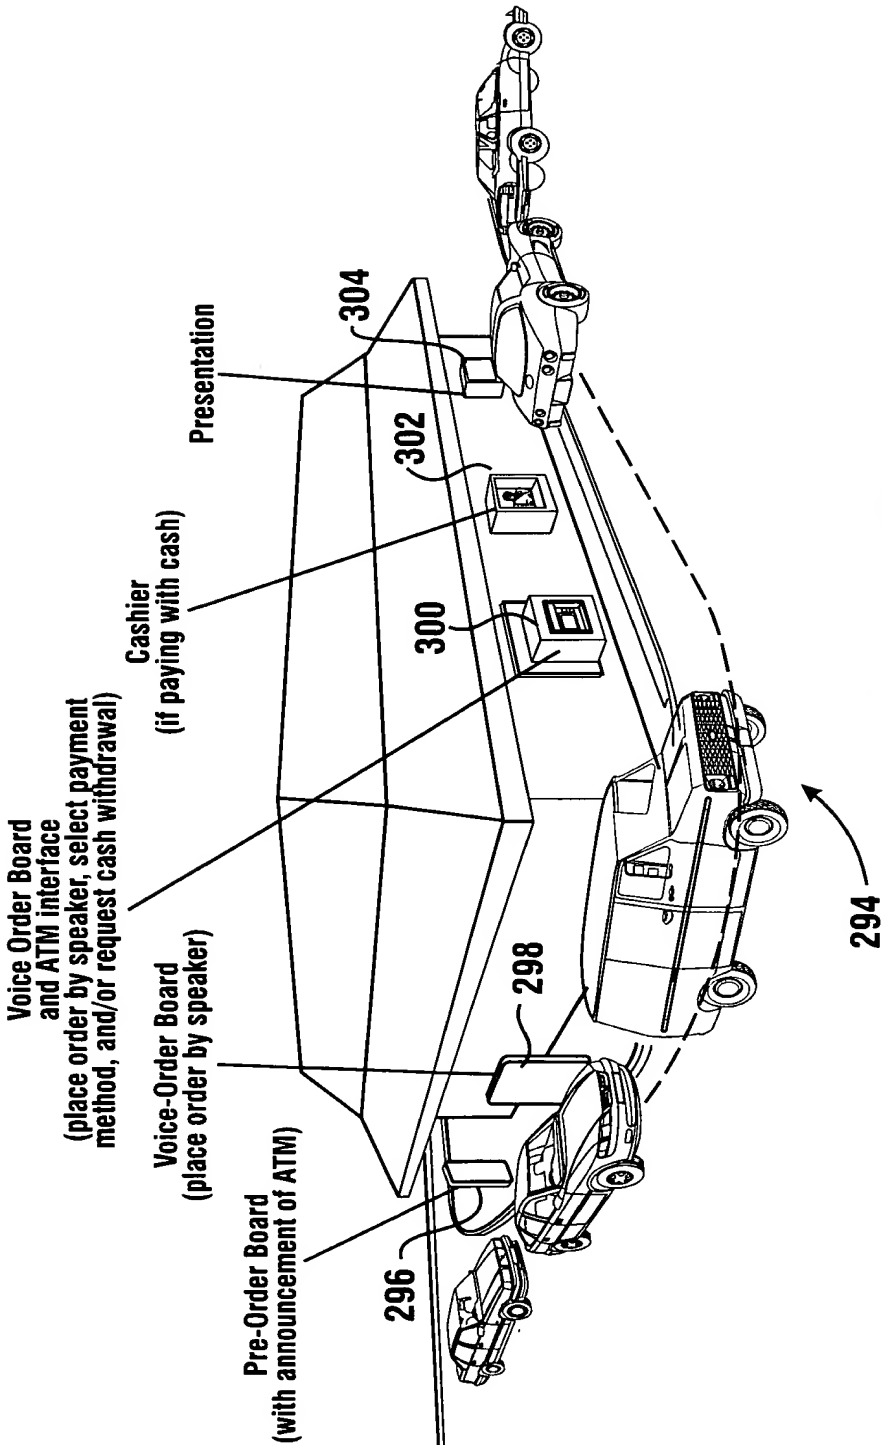 


FIG. 49

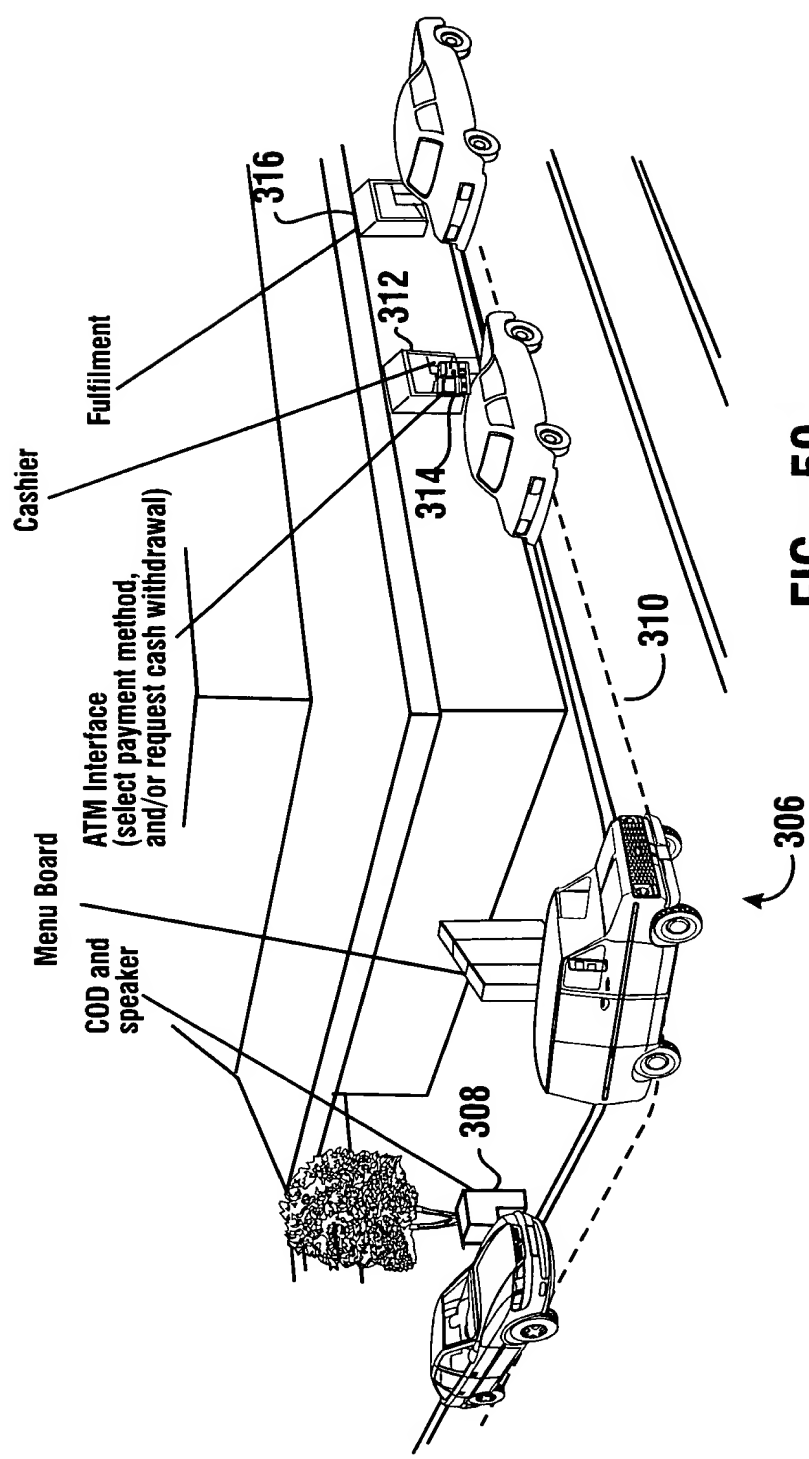 


FIG. 50

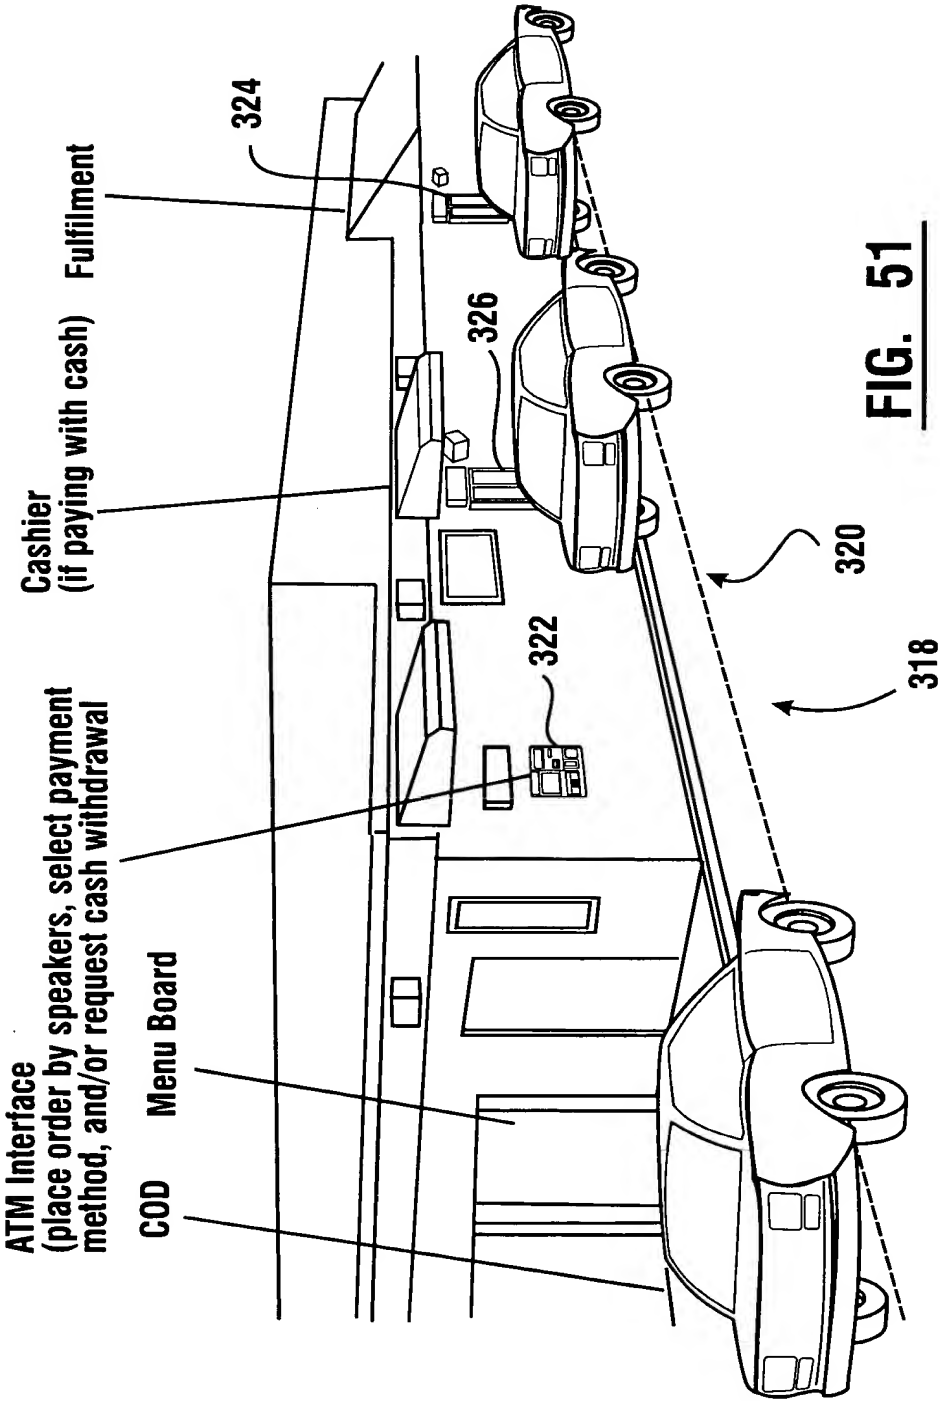
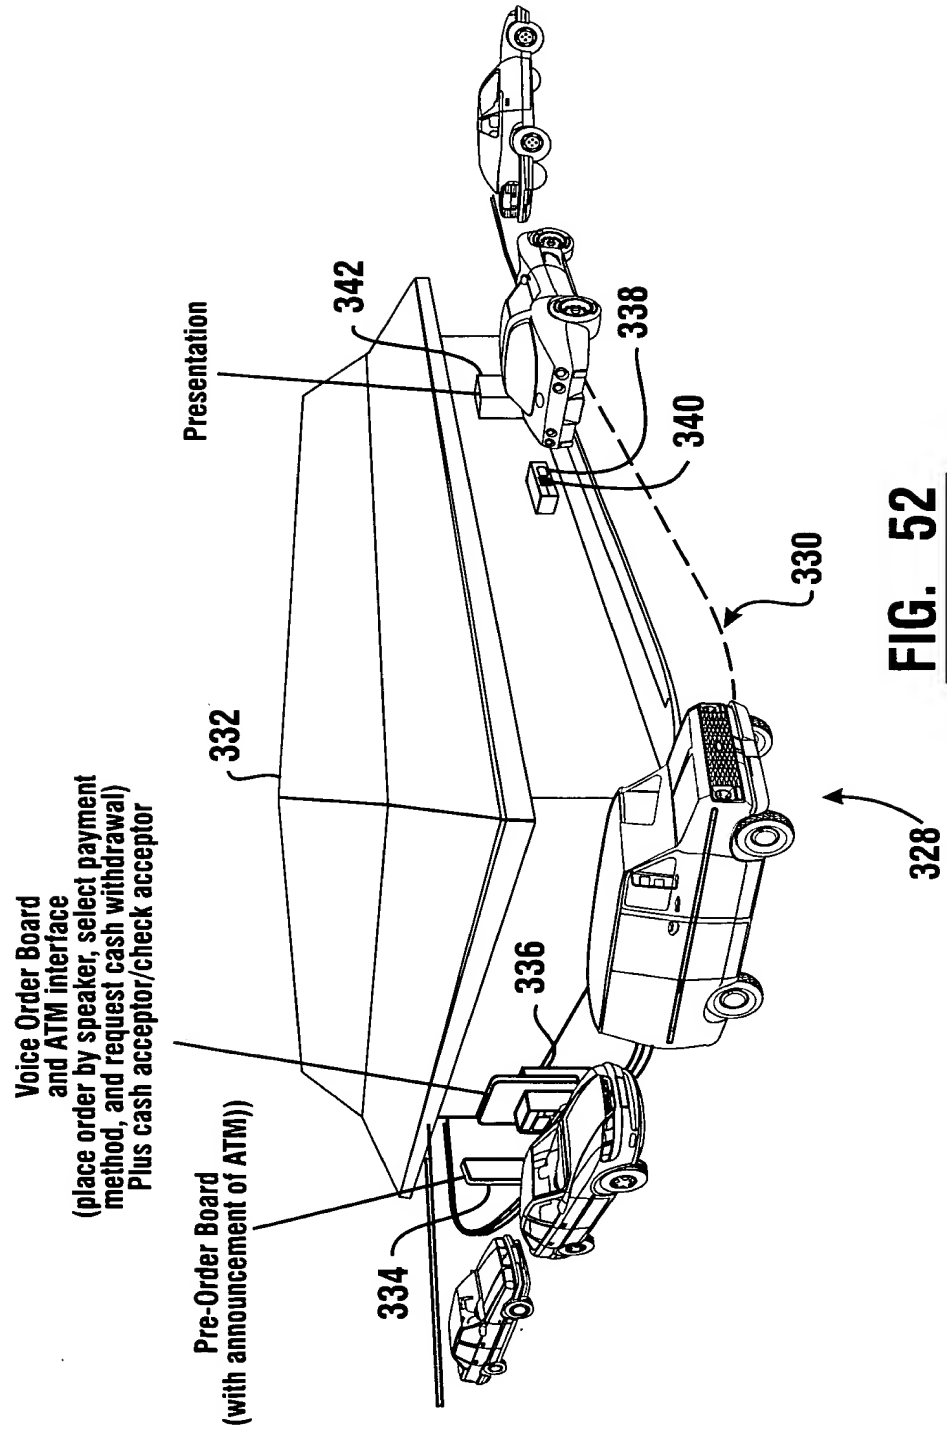 


FIG. 51

 


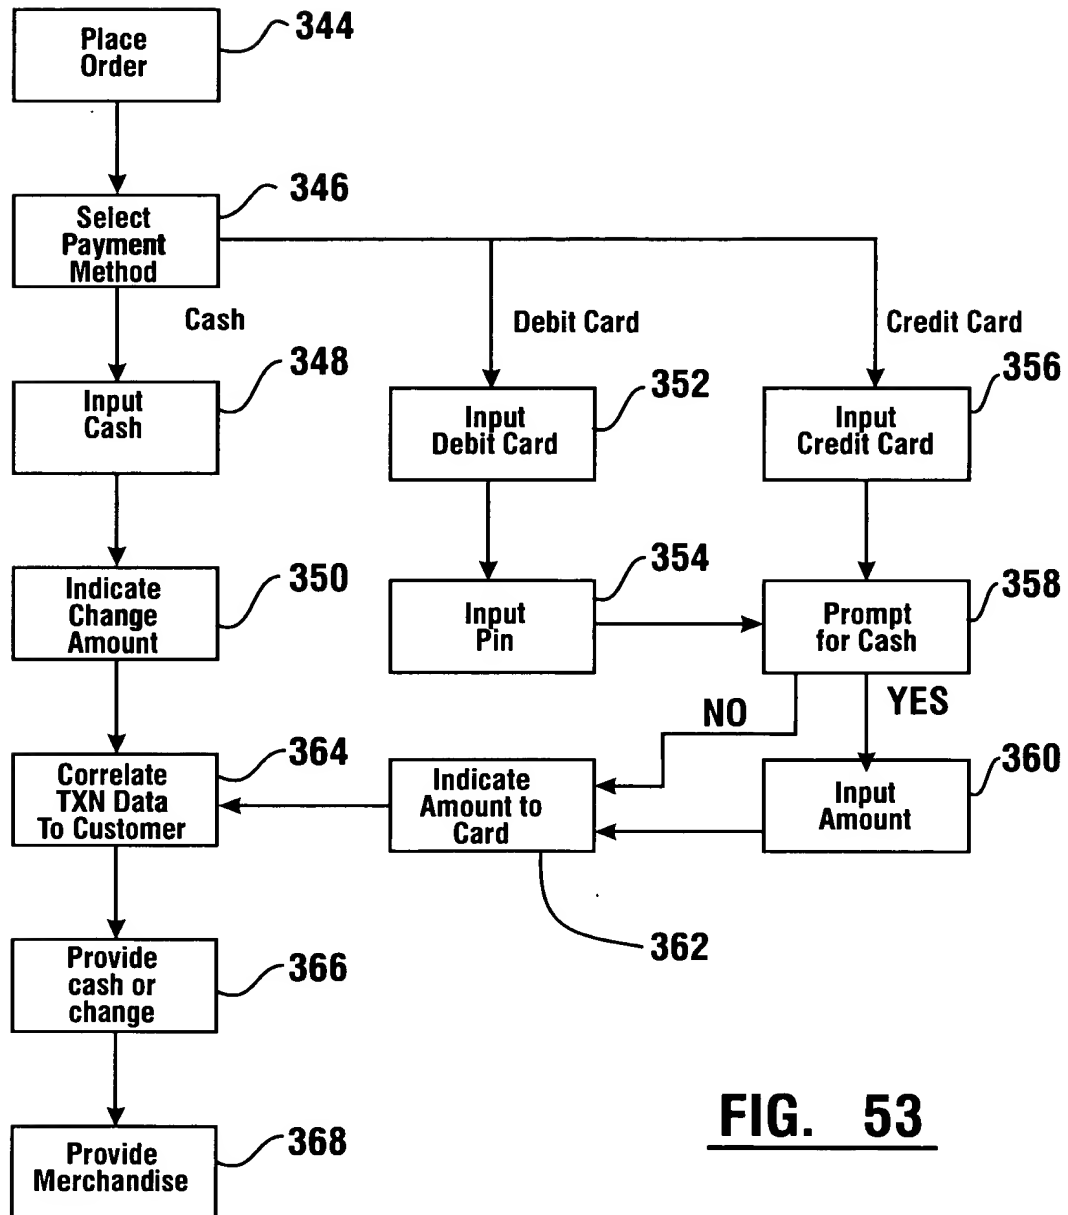 


FIG. 53

 
FIG. 54




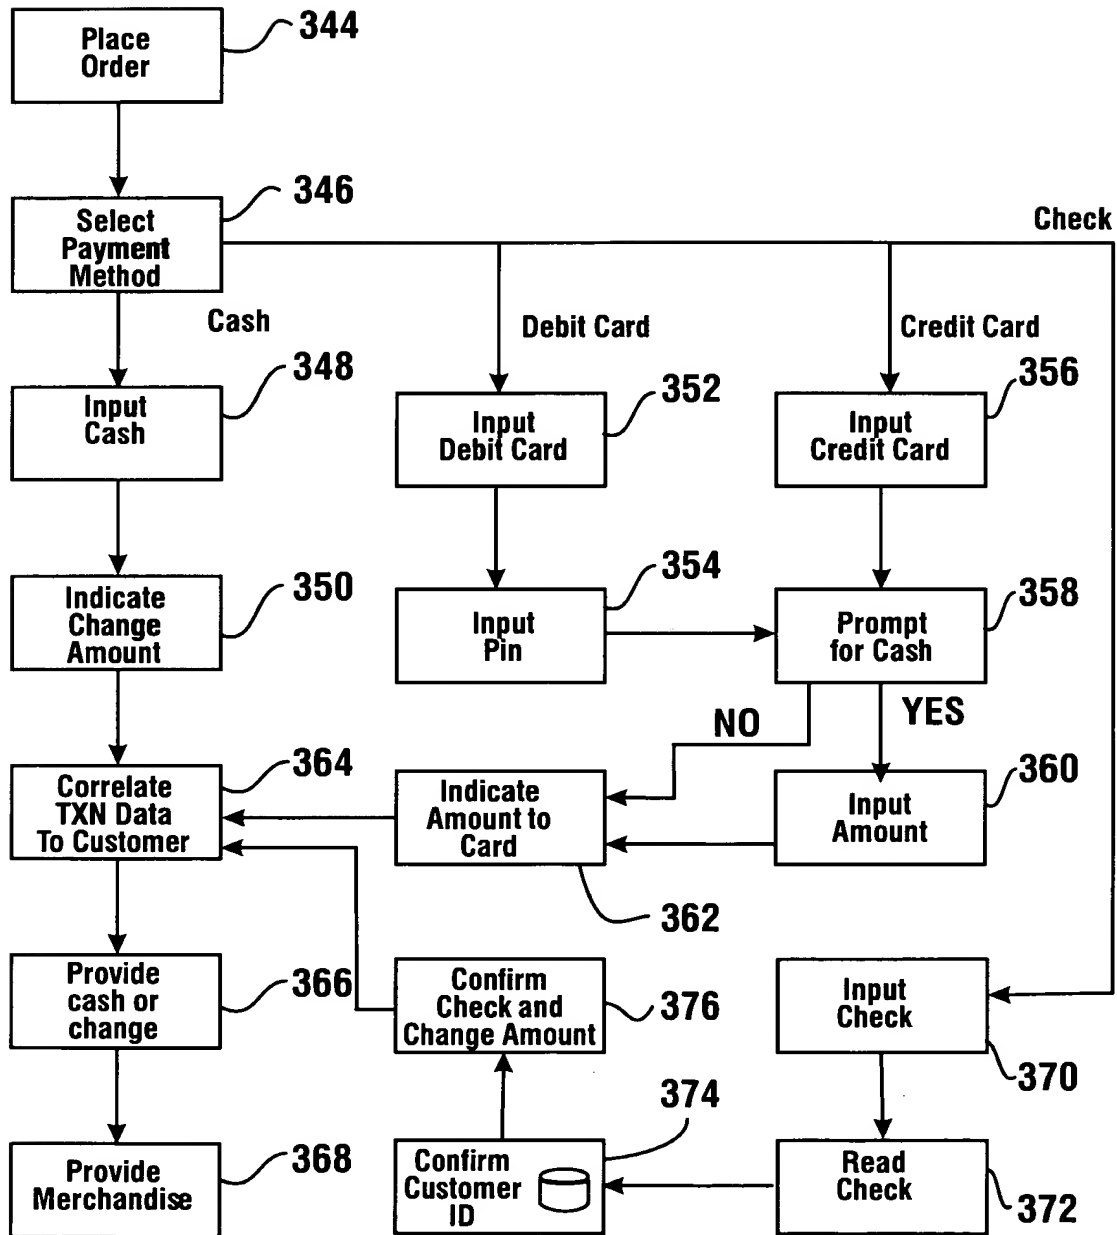

378

  FIG. 55

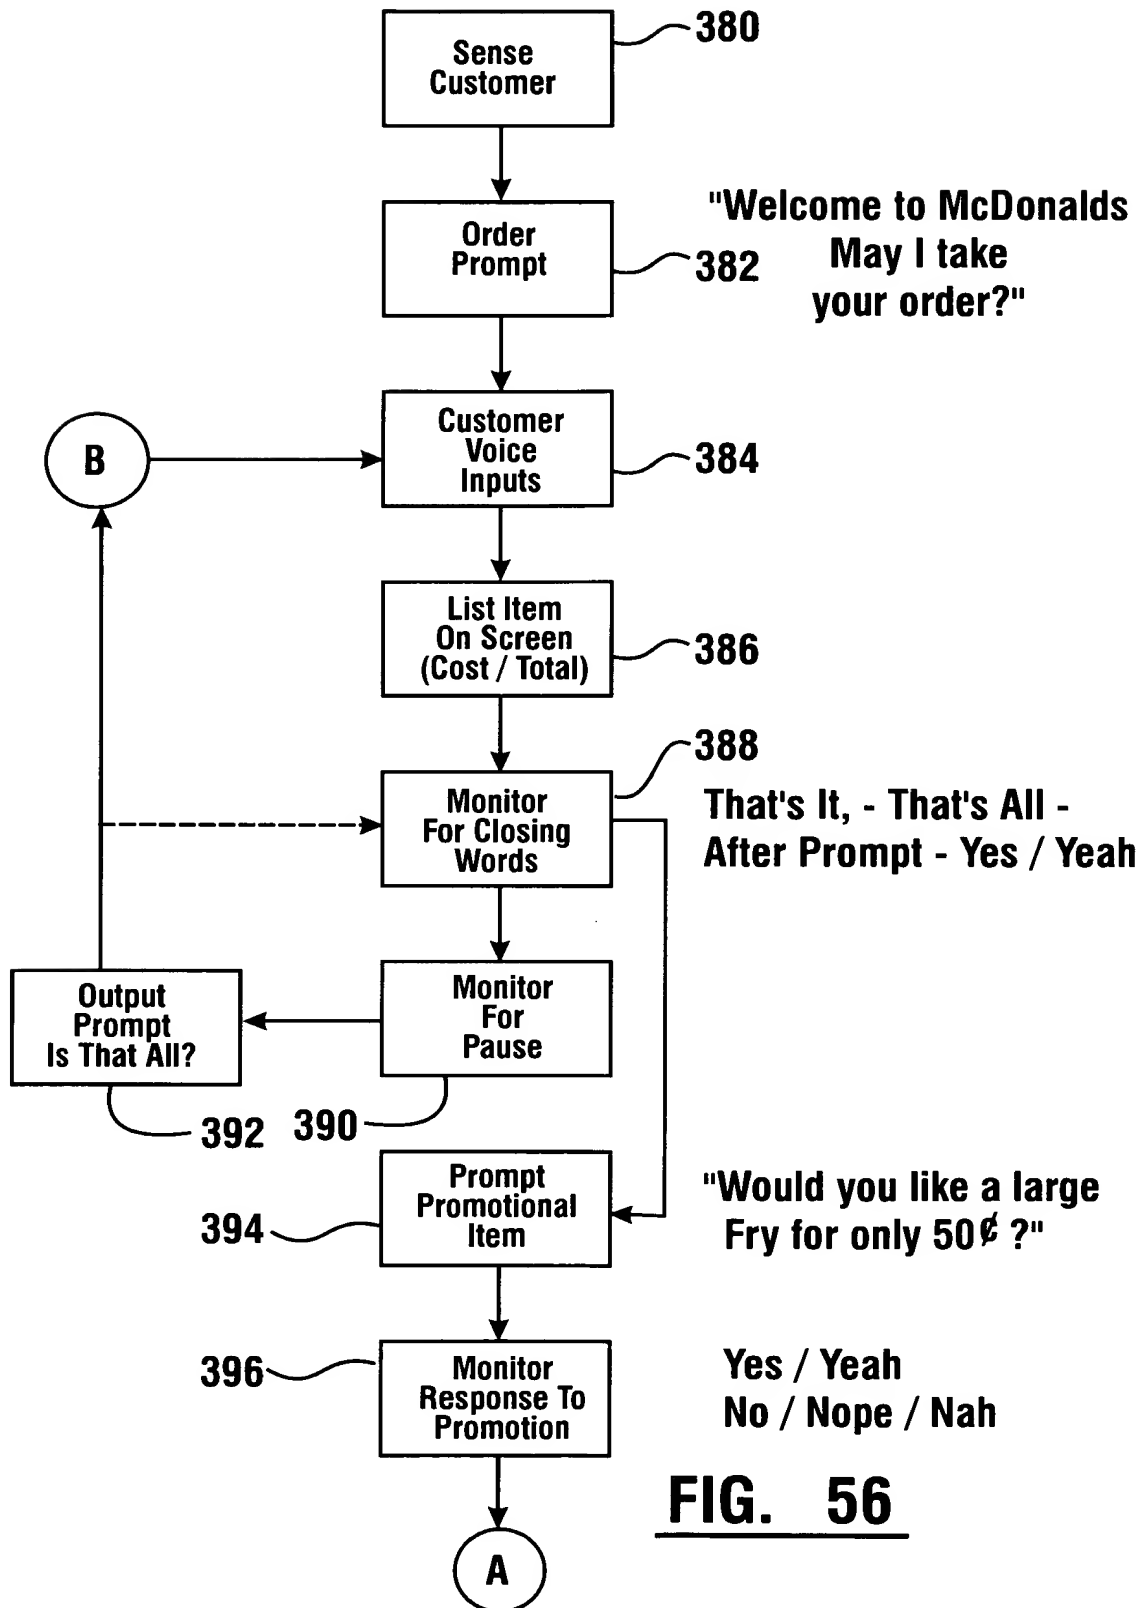

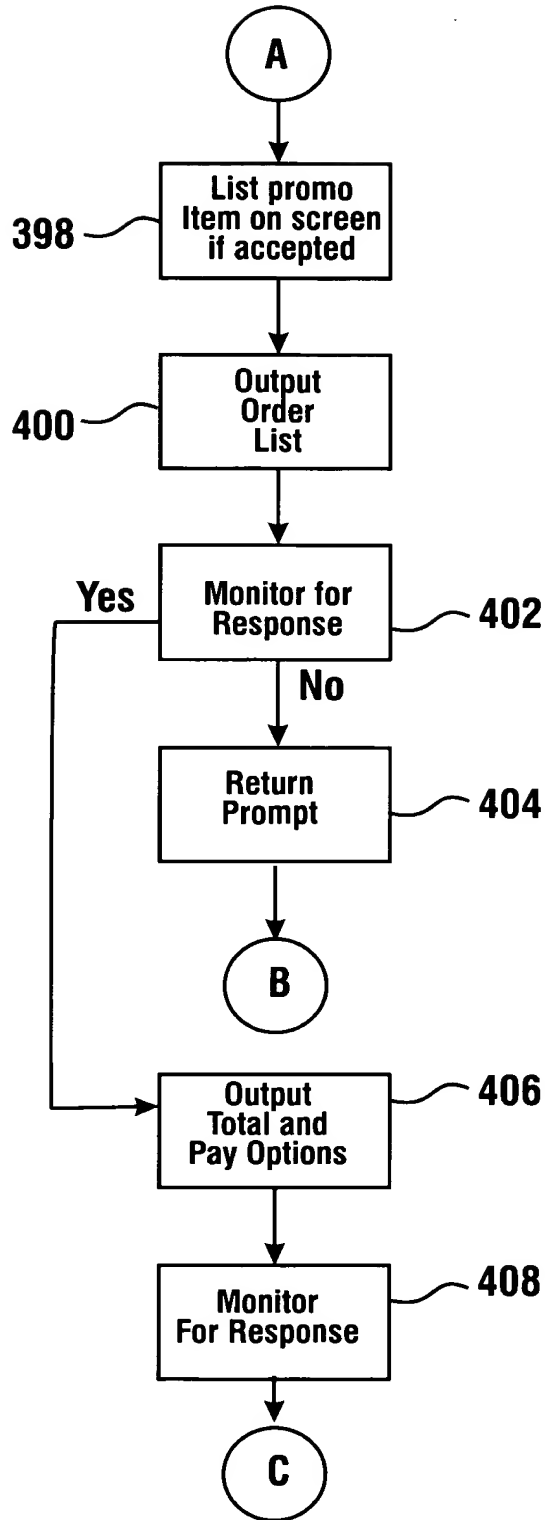

**"Okay - I have your
order as**


Is that Right?"

**Yes / Yeah / Right / Correct
No / Nope / Nah / Incorrect**

**"I'm Sorry I Must
Have Messed Up- Please
Give Me Your Order
Again."**

**"So Your Total Will
Be \$____. How
Would You Like To
Pay? Cash Or Card
(Or Would You Like to
Cash a Check)"**

FIG. 57

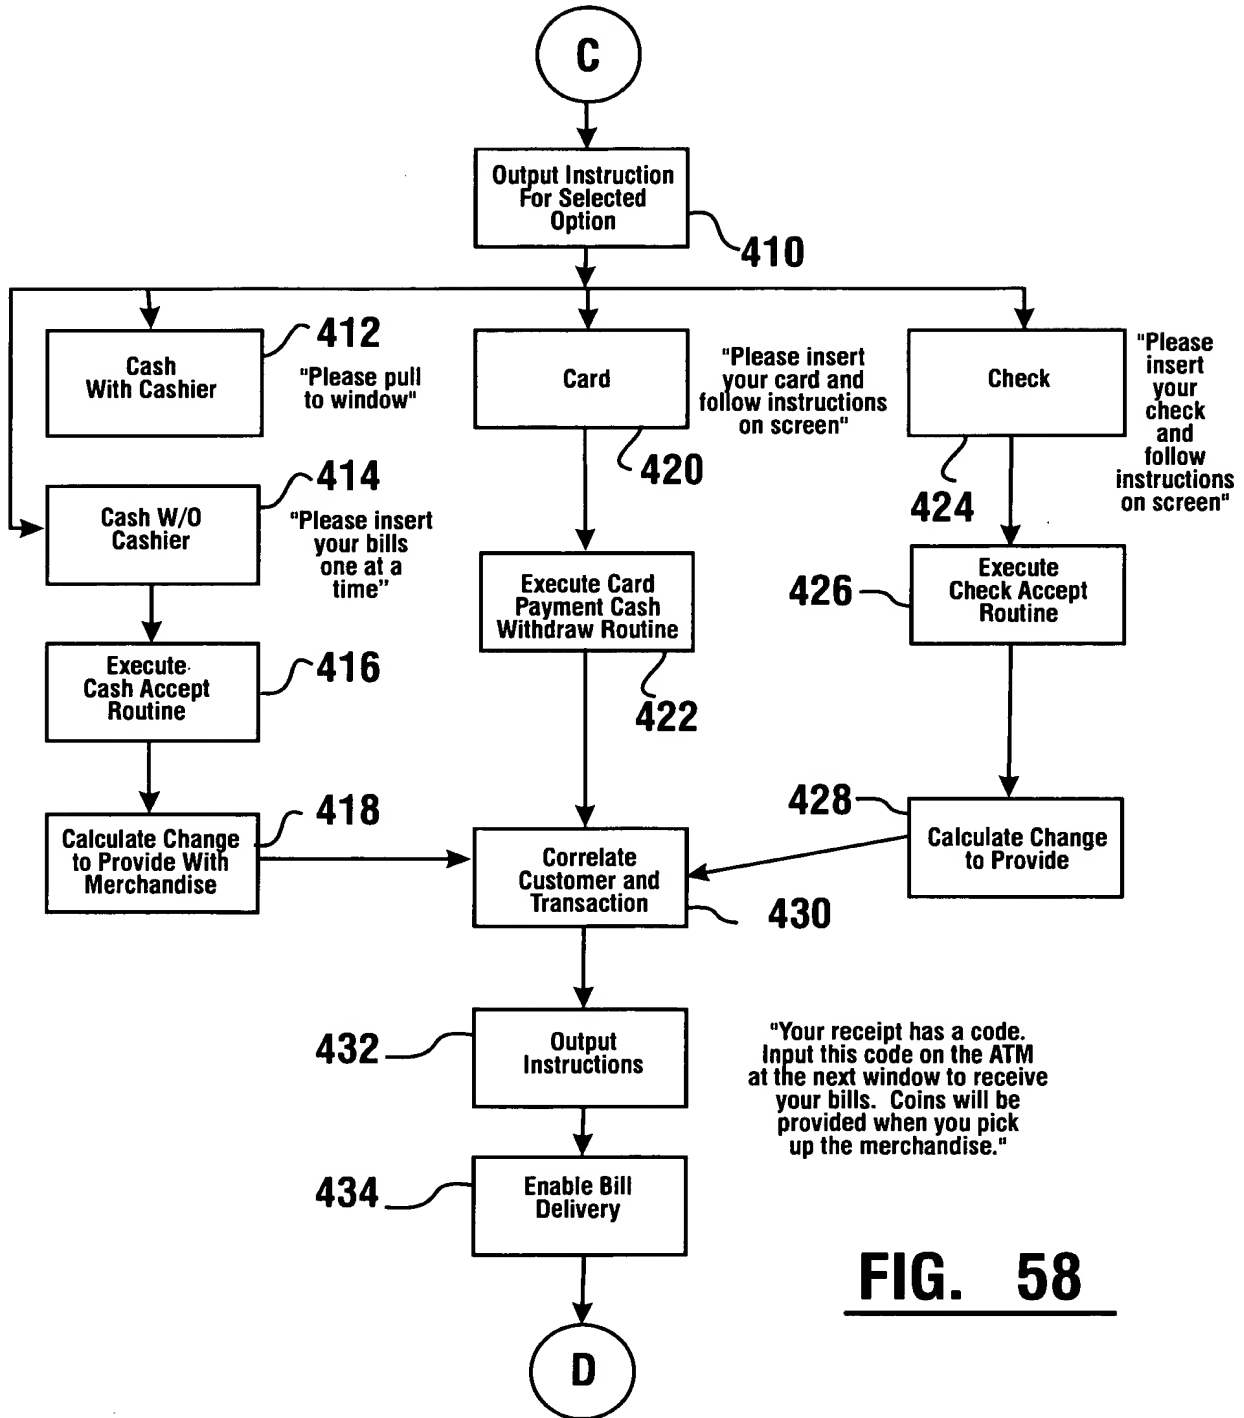 

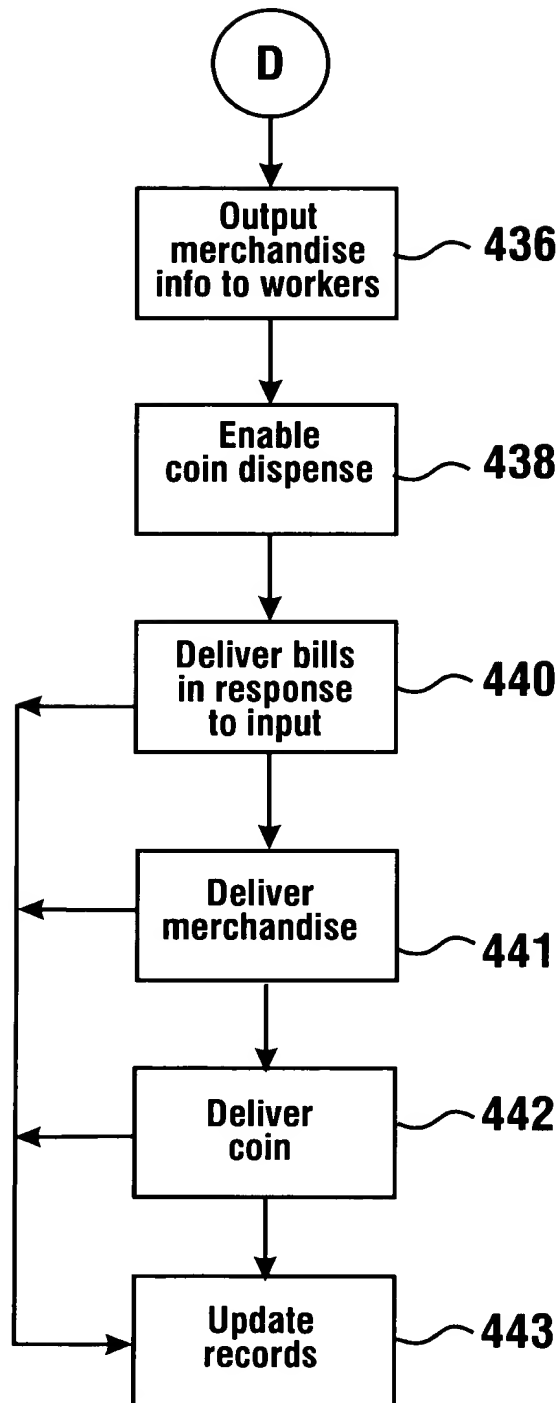 


FIG. 59